


INSTALLATION INSTRUCTION

EH-20

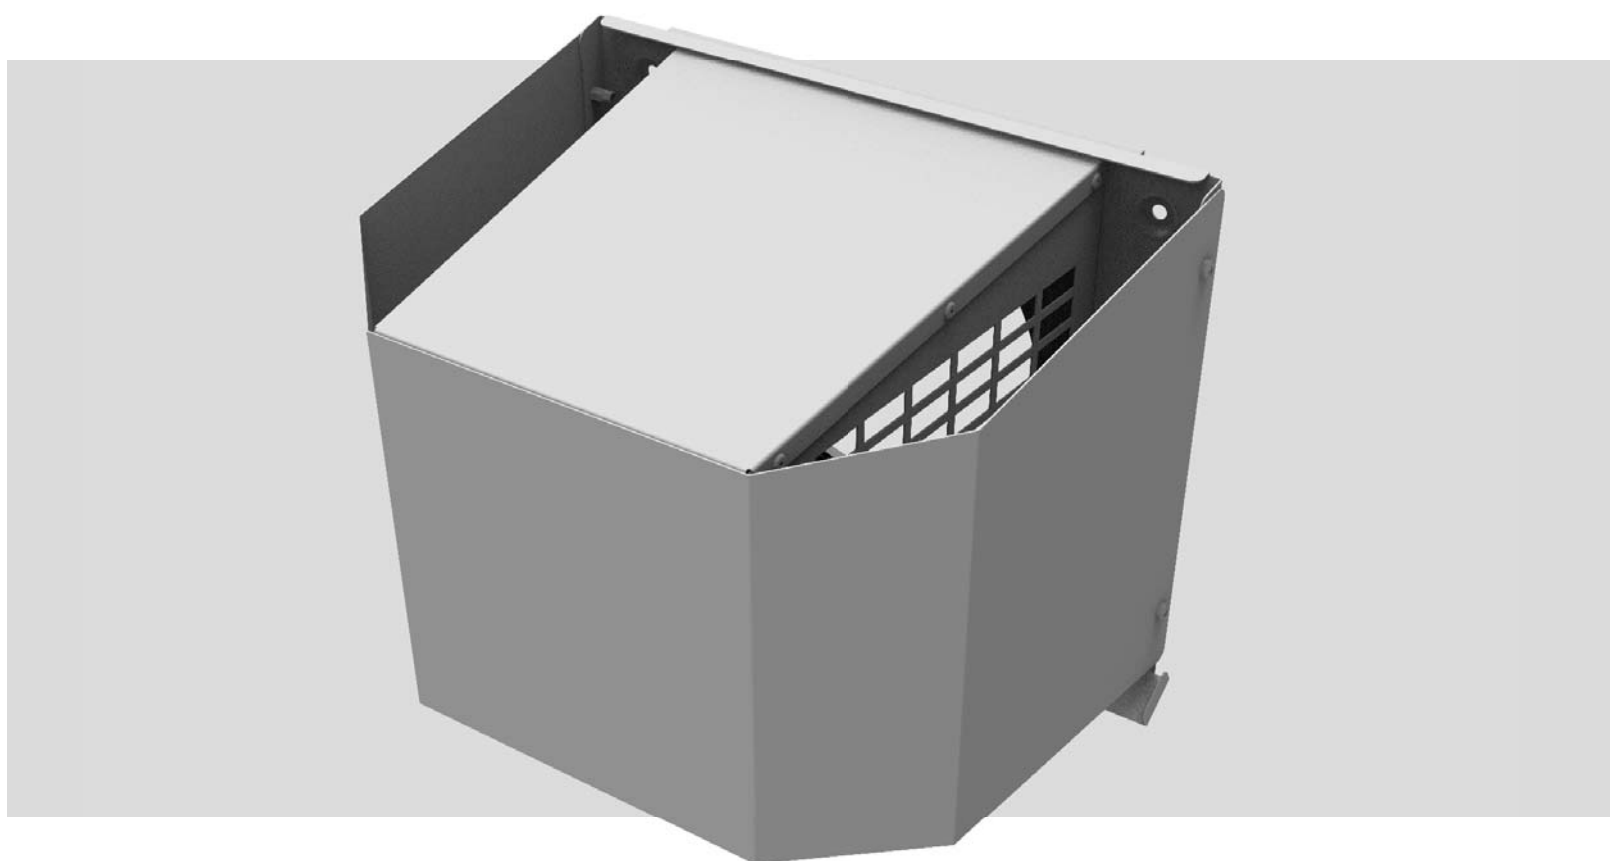

Outer ventilation hood

fanco●

PURPOSE

The outer ventilation hood is designed to prevent ingress of water and foreign objects into the ventilation equipment from outside.




THE UNIT SHOULD NOT BE OPERATED BY CHILDREN OR PERSONS WITH REDUCED PHYSICAL, MENTAL, OR SENSORY CAPACITIES, OR THOSE WITHOUT THE APPROPRIATE TRAINING.

THE UNIT MUST BE INSTALLED AND CONNECTED ONLY BY PROPERLY QUALIFIED PERSONNEL AFTER THE APPROPRIATE BRIEFING.

THE CHOICE OF UNIT INSTALLATION LOCATION MUST PREVENT UNAUTHORISED ACCESS BY UNATTENDED CHILDREN.


OVERALL DIMENSIONS

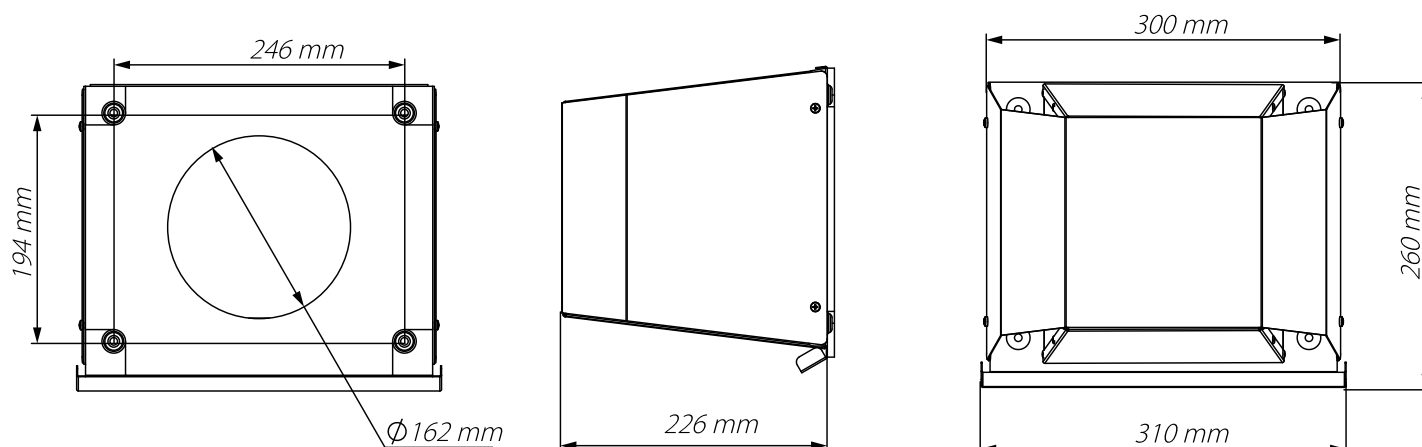


OUTER VENTILATION HOOD MOUNTING

1. Insert the air duct from indoor to protrude from outside on the outer wall surface.
Install the air duct with the minimum slope 3 mm downwards.
Cut the air duct excess with a hack saw or with any other suitable tool.
If the air duct has a sound-insulating layer inside, remove it before cutting the air duct.
Cut the sound-insulating layer to be flush with the air duct.


WARNING! If the mounting place is located at high altitude, please refer to a mounting company possessing an appropriate mounting equipment!

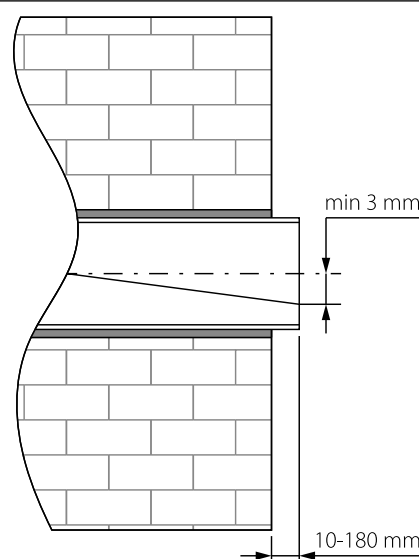


2. Mark the fastening holes for the outer ventilation hood and drill 4 holes, 50 mm deep to suit the expansion anchors (6x40). Use the back wall of the ventilation hood to facilitate the marking.

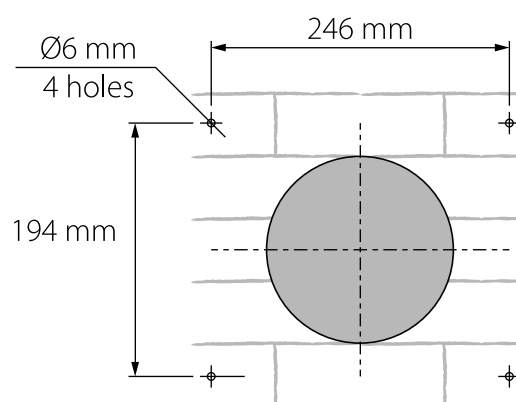


3. Insert the supplied expansion anchors 6x40 into the holes. Undo the screws to remove the front part of the hood and to enable access to the fastening holes. For this undo the 4 screws and remove the ventilation hood front part.

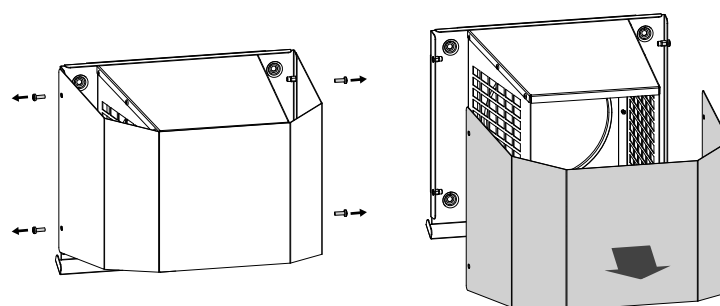

4. Fix the back part of the ventilation hood on the wall using the supplied screws 4x40.

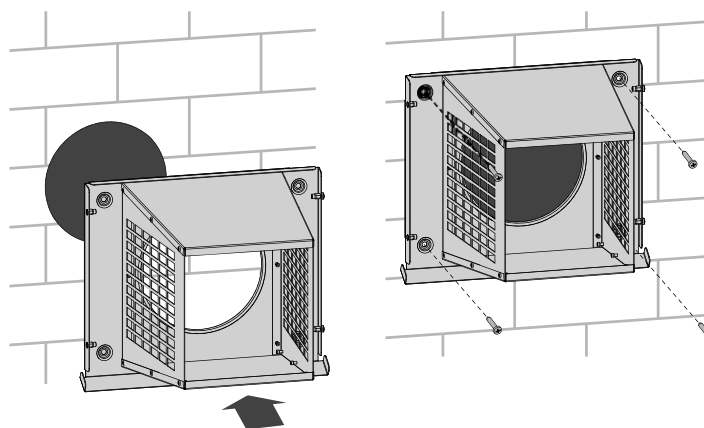

5. Cover the ventilation hood with the front part.

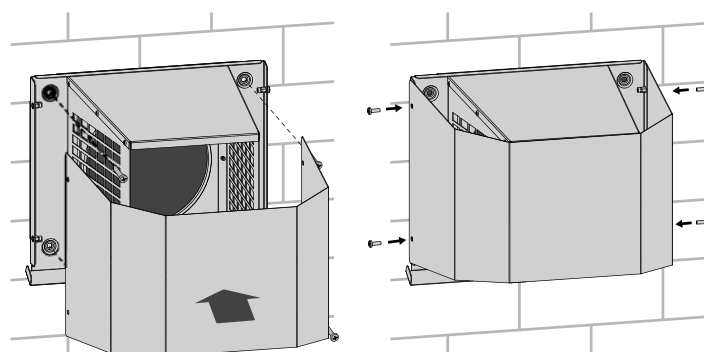

fanco●